

Reset instruction

1. Get a toothpick and cut it.




2. Turn off the box, and use the toothpick to press the hole between 2 USB. After 5-10 seconds, turn on the box.



3. When it shows the picture below, loose the toothpick.



4. Choose the fifth option “wipe data/factory reset”, and then “yes--delete all user data”

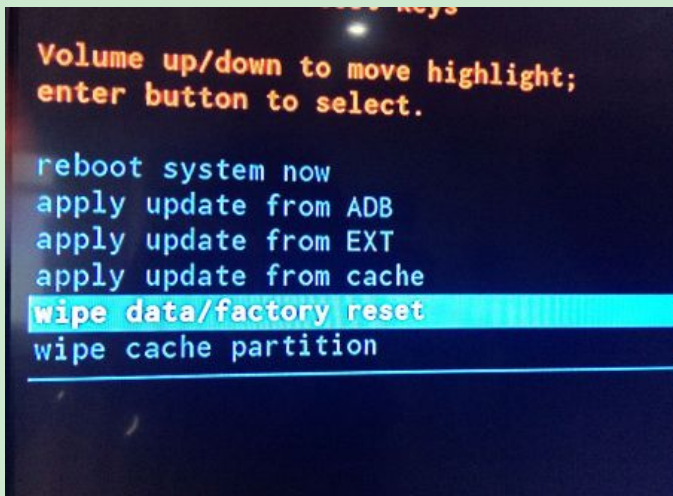

5. The box will show “wiping date...” on the bottom left, after it shows “Data wipe complete”, restart the box.



Please noted, after reset, the box need about 5mins to load, then everything will be OK.